

REMOTE IMMOBILISATION

Additional security for vehicles

VISION | corporate services

IMMOBILISE VEHICLES REMOTELY
VIA ANY INTERNET CONNECTED
PC, LAPTOP OR TABLET


How Remote Immobilisation works...

Adding Remote Immobilisation to **FleetTracker** means that company vehicles can be immobilised remotely via any internet connected PC, laptop or tablet.

Should a vehicle be moved without the knowledge or approval of the company or the owner, **FleetTracker** automatically issues an email alert containing the vehicles details and current location. The vehicle can then be immobilised via the Crystal Ball System using the device immobilisation screen.

This action ensures that the vehicle will not start again the next time the ignition is switched on, and will not do so until the system instructs the immobiliser to be deactivated.

Additional immobilisation can also be added to the vehicle through Crystal Ball's Driver ID "Dallas" key reader which is fitted to either the dashboard or steering column.

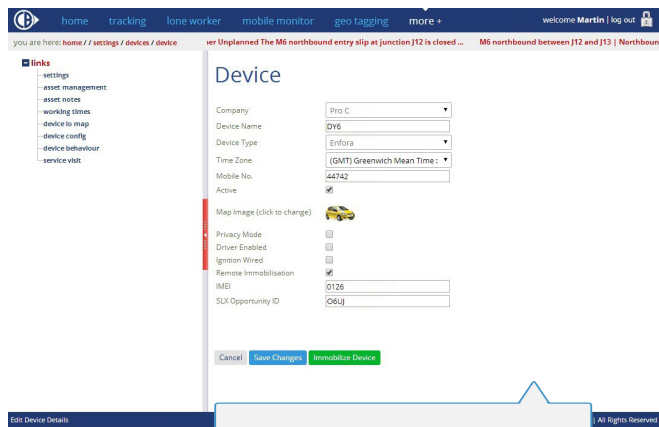

device immobilisation screen



DRIVER ID IMMOBILISATION* (optional):
drivers apply their personally coded "dallas" key
against the dashboard / steering column reader
before the ignition activates



dallas key

How Remote Immobilisation can help your business...

» Improves levels of security...

adding remote immobilisation and dashboard mounted immobilisers* provides two extra security systems to you company vehicles.

» Potentially reduces insurance premiums...

having GPS tracking with immobilisation features may reduce your annual fleet insurance premiums**

» Improves stolen vehicle recovery rates...

remote immobilisation increases the chances that police can recover stolen vehicles where they have parked up.

* Additional cost for Driver ID's immobilisation

** dependent on insurers terms & conditions

TEL: 0333 321 4888

EMAIL: info@vision-corporateservices.co.uk

WEB: www.vision-corporateservices.co.uk

 **Crystal Ball**
certified partner